

TBW Under Tray Install

2015-2019 Subaru Outback

STUDY THESE INSTRUCTIONS BEFORE INSTALLATION. INSTALL MUST HAVE A KNOWLEDGE OF AUTOMOBILE SYSTEMS. IF UNFAMILIAR WITH OUTLINED INSTRUCTION WE RECOMMEND INSTALL BE COMPLETED BY A QUALIFIED PROFESSIONAL.

Tools Needed for install:

- 3/8" driver socket OR socket with adapter
- 10mm socket/wrench
- Drill
- Optional – use a rivet nut tool (not included)

WARNING!


CAUTION SHOULD BE TAKEN WHEN PERFORMING MAINTENANCE OR UPGRADES TO YOUR VEHICLE. OBSERVE AND ABIDE BY ANY LABELS ON COMPONENTS AND TOOLS. IF YOU HAVE ANY QUESTIONS CONSULT WITH A PROFESSIONAL MECHANIC OR CONTACT TBW PERFORMANCE FOR MORE INFORMATION.

#1. If you have your OEM panel – remove this. Removal requires flathead screwdriver and 12mm socket.


#2. Install three(3) M6 extruded u-nuts along the front bumper (RED). On the edge of the main panel you need to make sure the two(2) M6 extruded u-nuts are installed as this will help attach the front panel to the rear.



#3. Install the front panel along the bumper with three (3) M6 bolts (YELLOW). Next, install the rear M6 bolt (RED) and the 2 plastic push clips (GREEN) to help hold this up and in place.

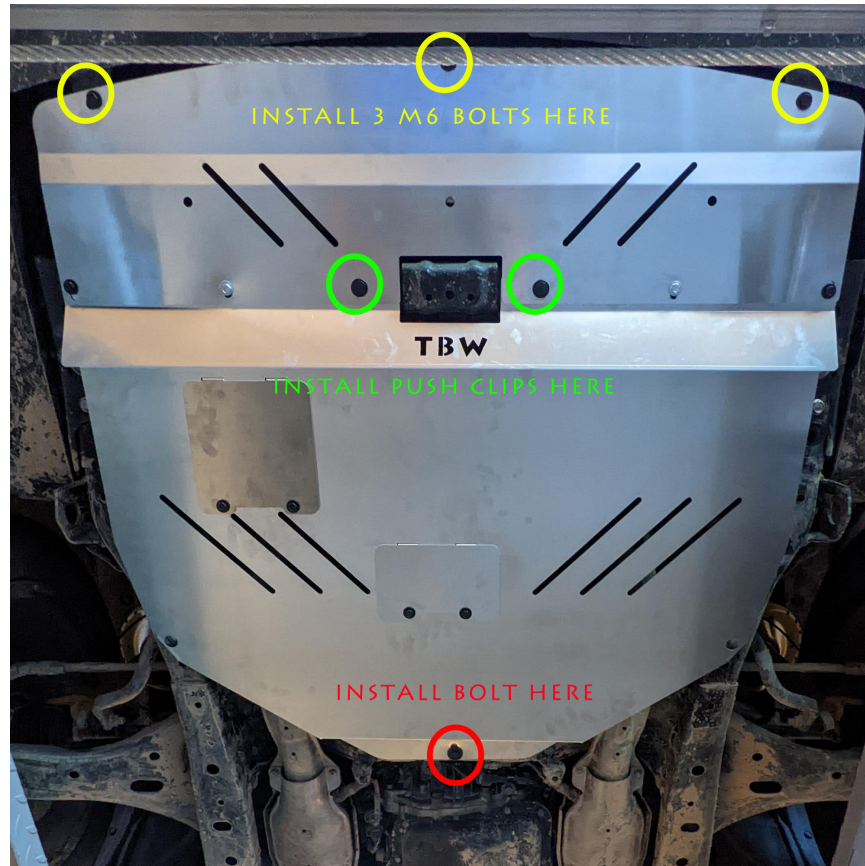

#4. Install 2 M6 bolts on the sides to attach the front to the rear panel. Do not tighten down any M6 bolts completely until all bolts are in location. Next, install four (4) 3/8" self-tapping bolts with washers in the RED locations. Tighten these until snug, but do not over tighten. Alternatively, you can use M6 rivet nuts here (install tool available separately) with additional M6 bolts.

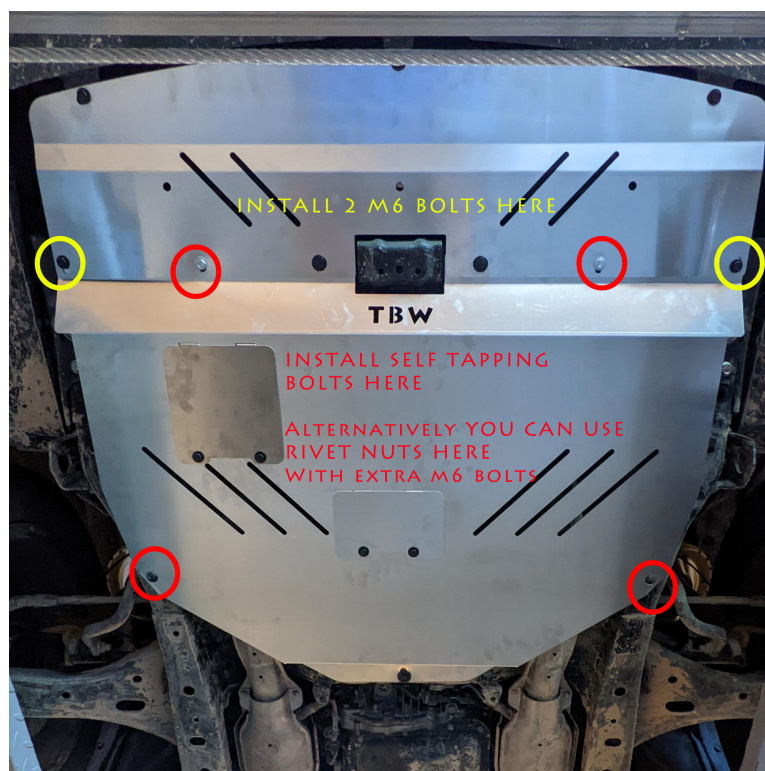

#5. Tighten all bolts down securely and make sure the oil change door bolts are also snug. This should now be secured and you should like the following picture.

