

TBW Under Tray Install

2009-2014 Acura TSX

STUDY THESE INSTRUCTIONS BEFORE INSTALLATION.
INSTALLER MUST HAVE KNOWLEDGE OF AUTOMOBILE
SYSTEMS. IF UNFAMILIAR, WE RECOMMEND INSTALL TO BE
COMPLETED BY A QUALIFIED PROFESSIONAL.

Tools Needed for install:


- Flathead screwdriver
- 10mm socket/wrench/drill
- Rivet Nut Tool

WARNING!


CAUTION SHOULD BE TAKEN WHEN PERFORMING MAINTENANCE OR UPGRADES TO YOUR VEHICLE. OBSERVE AND ABIDE BY ANY LABELS ON COMPONENTS AND TOOLS. IF YOU HAVE ANY QUESTIONS CONSULT WITH A PROFESSIONAL MECHANIC OR CONTACT TBW PERFORMANCE FOR MORE INFORMATION.

#1. Remove the OEM Plastic Push clips and any OEM plastic under tray
Remove the **PLASTIC PUSH CLIPS** (use flathead screw driver)

#2 Install 6mm Rivet Nuts in these 6 holes (choose any 4 of the 6 along the front edge)

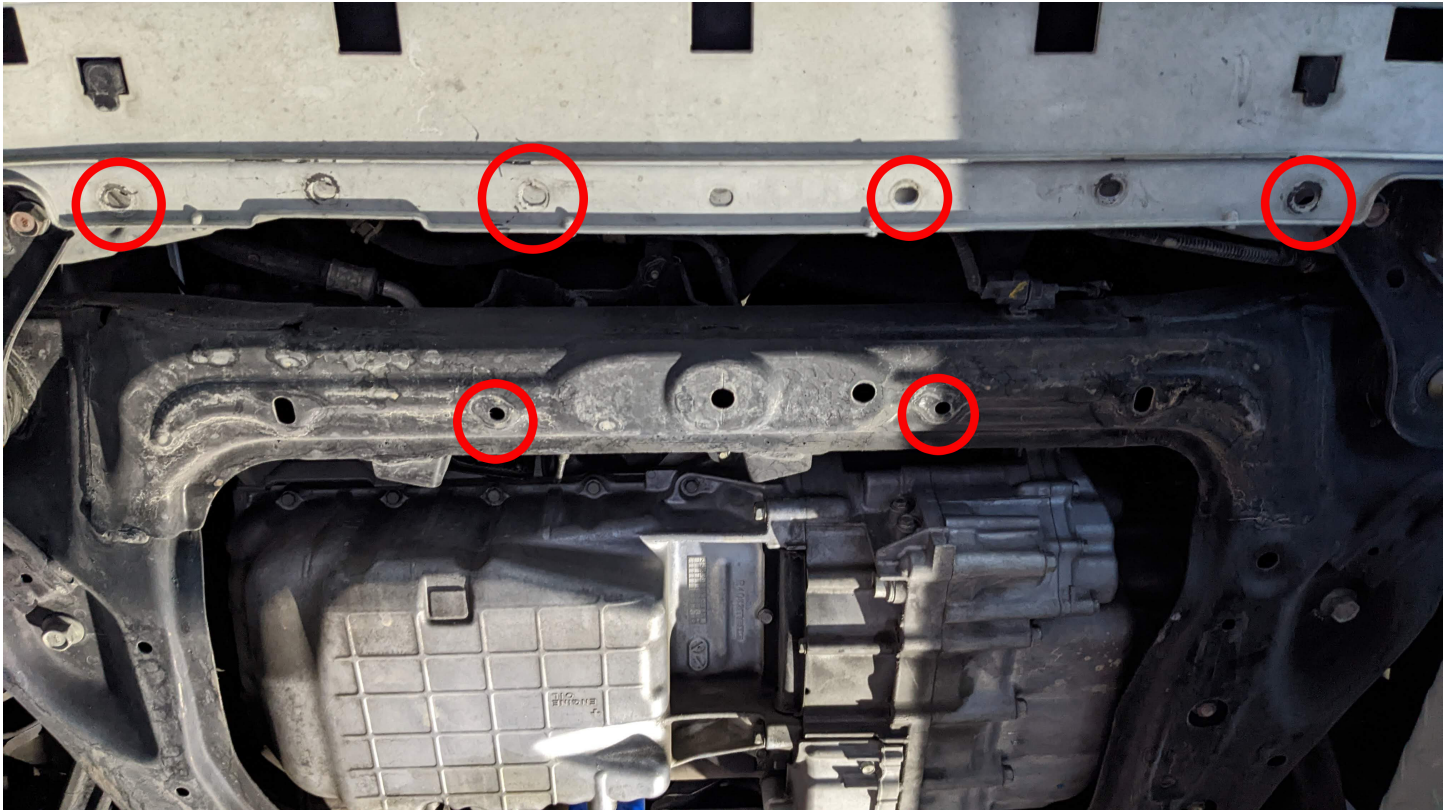


#3 Install 4 rivet nut holes in the RED locations marked here (Green were done in previous step)

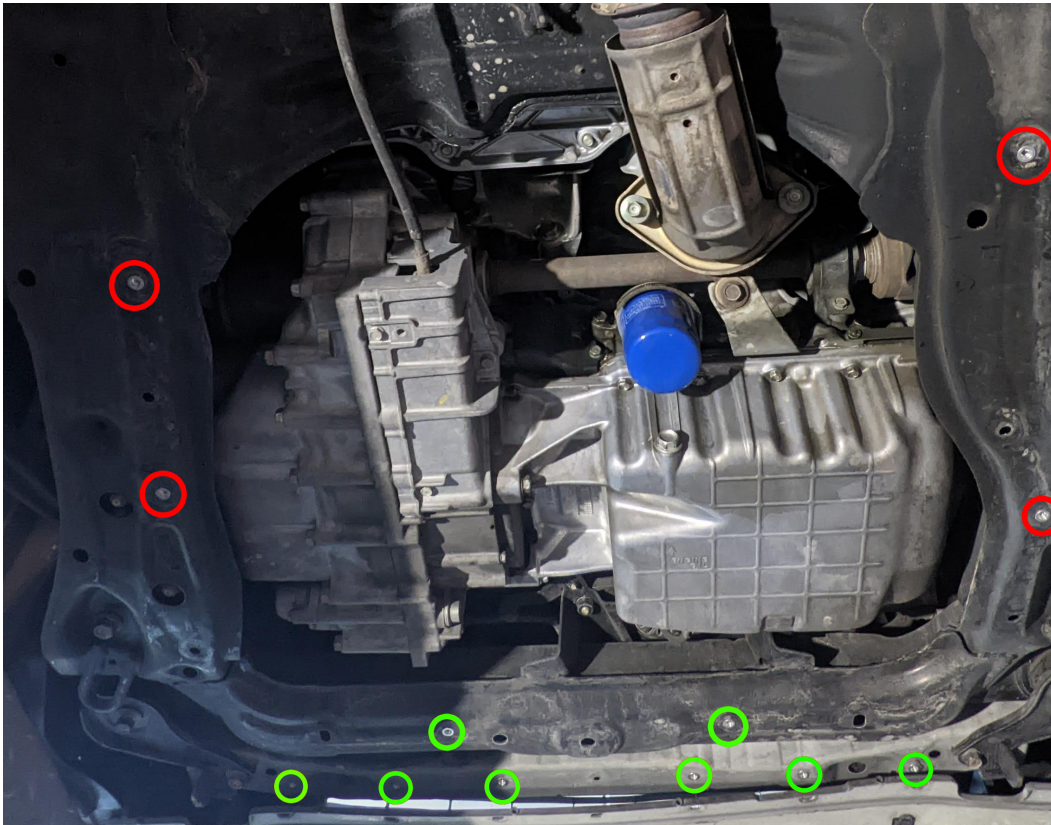


#4) Install 4 u-nuts on the main panel for overlap location

#5) Install the rear (main) panel on to car with 4 of the M6 bolts into the locations from step 3
Keep bolts loose until ALL bolts are in place.

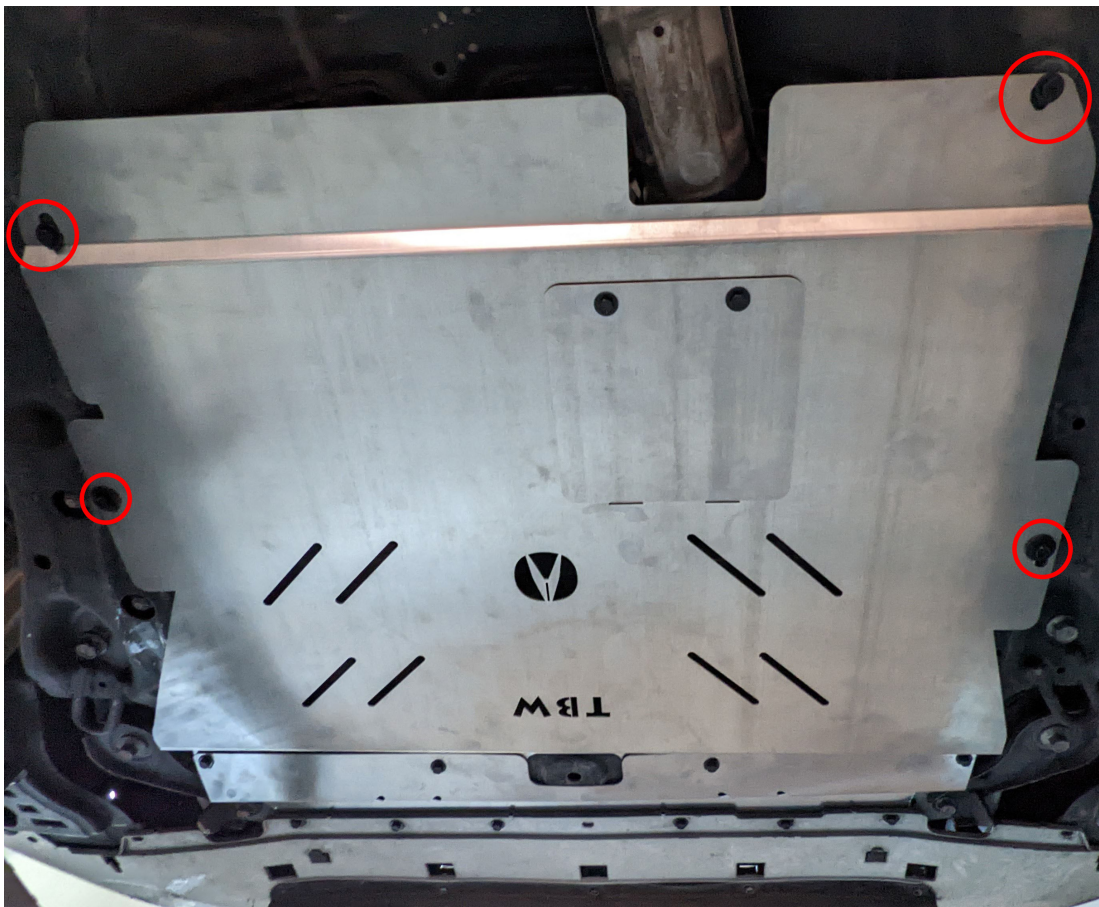

#6) Overlap and place front panel on top of the rear panel – corners will attach with a u-nut and bolt
Keep bolts loose until ALL bolts are in place.

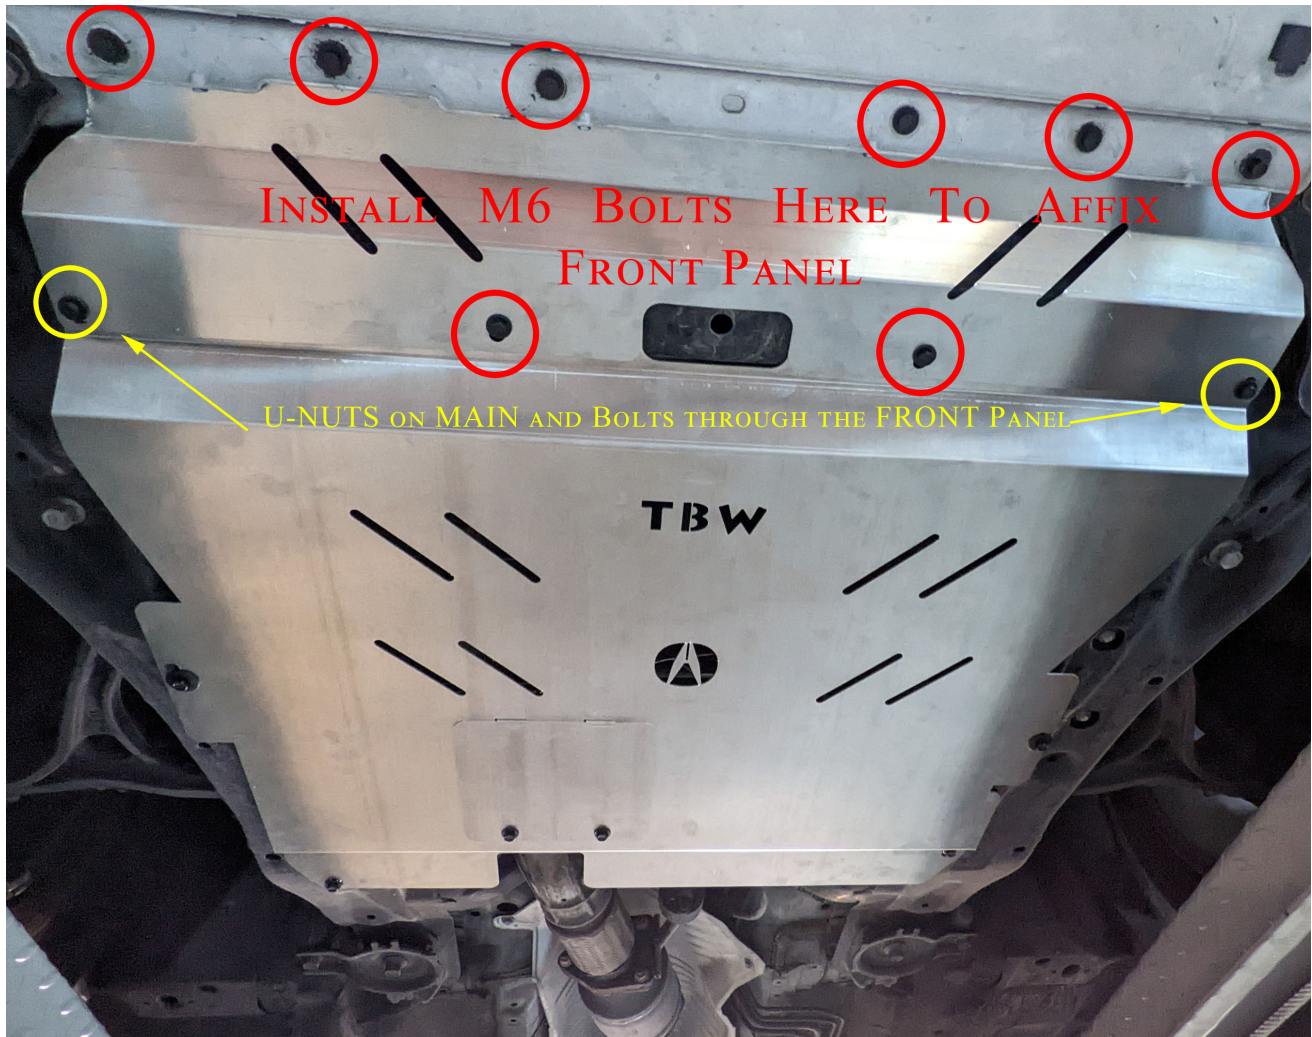

#7) Install the M6 bolts on all front panel holes. Six of these bolts will thread into the rivet nuts (RED) from step 3 and the other two will thread into the U-nuts from step 6.

#8) Tighten all bolts down to approx 15 -20 ft lbs. Just hand tight is fine.