

TBW Under Tray Install

2012-2017 Subaru CrossTrek

STUDY THESE INSTRUCTIONS BEFORE INSTALLATION.
INSTALLER MUST HAVE A KNOWLEDGE OF AUTOMOBILE SYSTEMS.
IF UNFAMILIAR WE RECOMMEND INSTALL BE COMPLETED BY A
QUALIFIED PROFESSIONAL.

Tools Needed for install:


- 3/8" driver socket OR socket with adapter
- 10mm, 12mm & 13mm socket/wrench

WARNING!

CAUTION SHOULD BE TAKEN WHEN PERFORMING MAINTENANCE OR UPGRADES TO YOUR VEHICLE. OBSERVE AND ABIDE BY ANY LABELS ON COMPONENTS AND TOOLS. IF YOU HAVE ANY QUESTIONS CONSULT WITH A PROFESSIONAL MECHANIC OR CONTACT TBW PERFORMANCE FOR MORE INFORMATION.


- #1. If you have your OEM panel – remove this. Removal requires flathead screwdriver for the push clips and 12mm socket for the bolt heads.
- #2. Install 4 extruded u-nuts on to the aluminum under tray in the following locations, and 2 along bumper in the center 2 most holes. A third hole is centered in the front panel in but there is no OEM hole located here

2012-2017 CrosSTREK

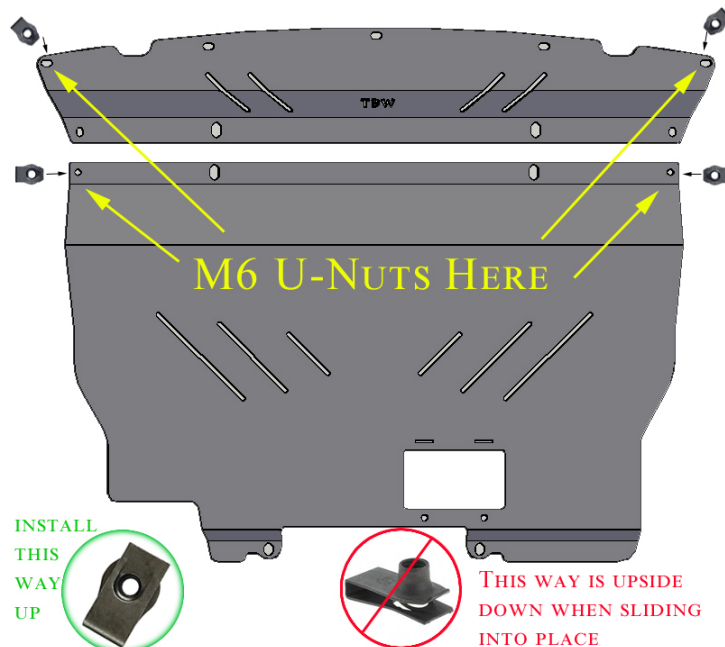


- #3. Install the front panel along the bumper with four (4) M6 bolts

Center of the front panel sits under the bumper, edges will sit ABOVE the bumper. Furthest wide bolts will go through bumper into the extruded u-nuts that were slid into place before. The 2 towards the center have the extruded u-nuts on the bumper and the bolts will attach here.

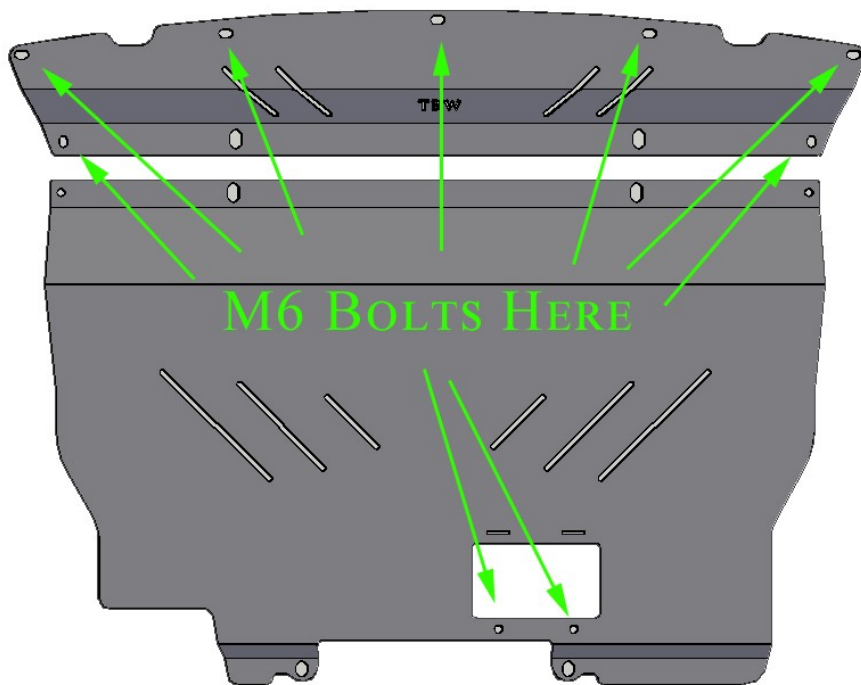

#4. Install rear panel with the 4 M8 bolts (13mm socket) – The rear panel will sit UNDER the front panel and they overlap at the radiator support. On the sides of the front panel and rear panel overlap are 2 m6 bolts that will thread into the extruded u-nuts installed earlier.
 2012-2017 CrosSTrek

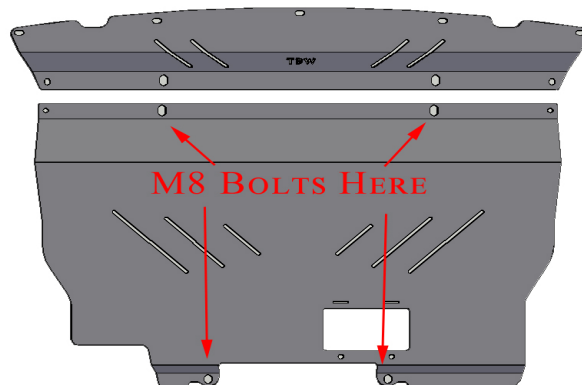

#5. Tighten all bolts down securely and make sure the oil change door bolts are also snug. This should now be secured and you should like the following picture.

