



## 2015-2019 Subaru WRX Under Tray Install


**#1)** Remove the OEM plastic under tray and metal dish under the engine. Keep the forged aluminum brackets on as these will be utilized for their strength.

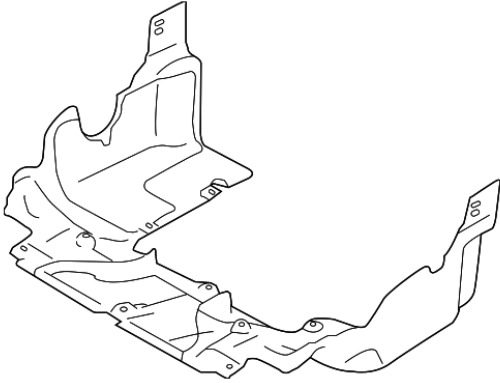


**#2)** You will want to align the metal brackets with the holes on the under tray. This can be easier with them off of the car but is not necessary. You will utilize the oem bolts and lock nuts here. Just put them on hand tight so you have a little flexibility for aligning the rest of the bolts to their holes.

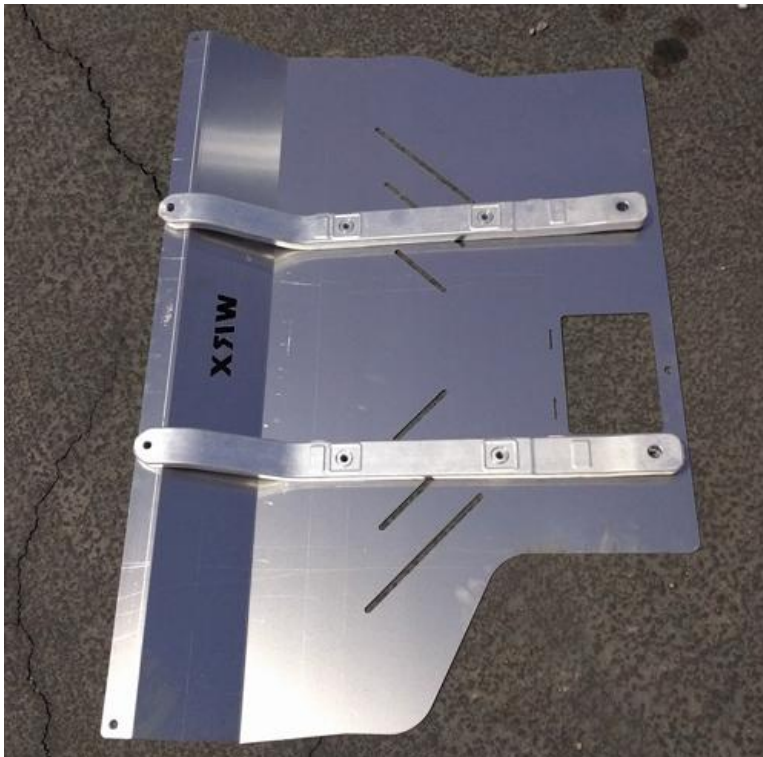

**#3)** Install the 6mm Extruded U-nuts in the marked location here. The other 4 will be used on the front bumper holes to make a much stronger install than the plastic push clips.

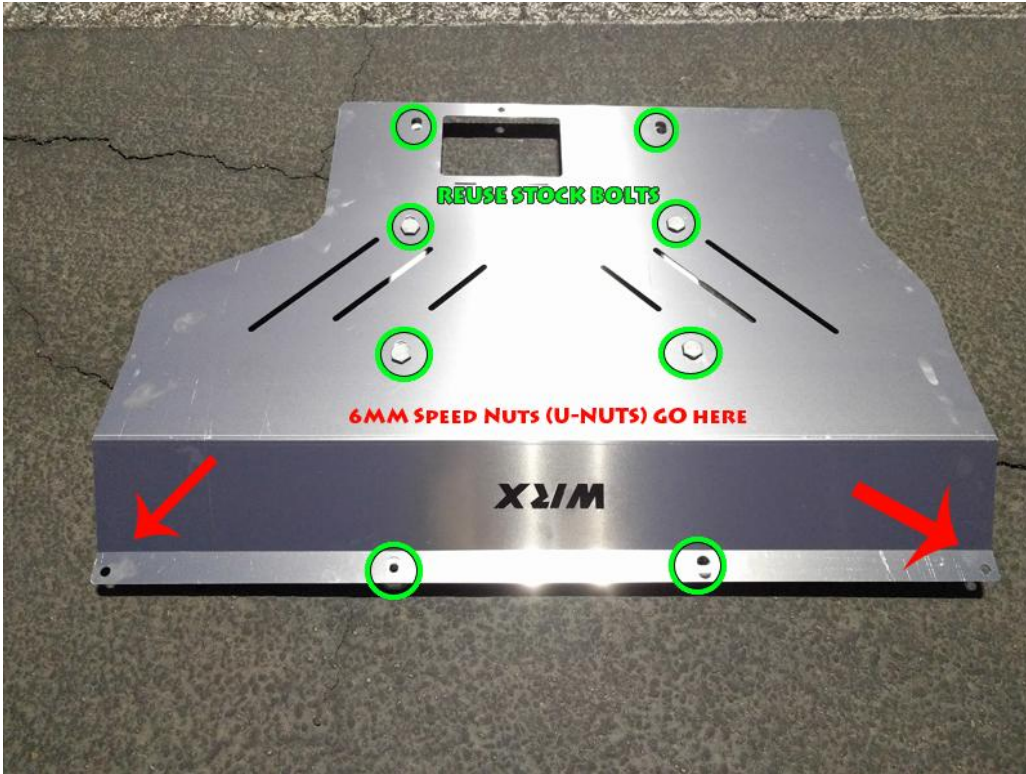

**#4)** Install the front bumper portion – it will overlap with the larger panel.

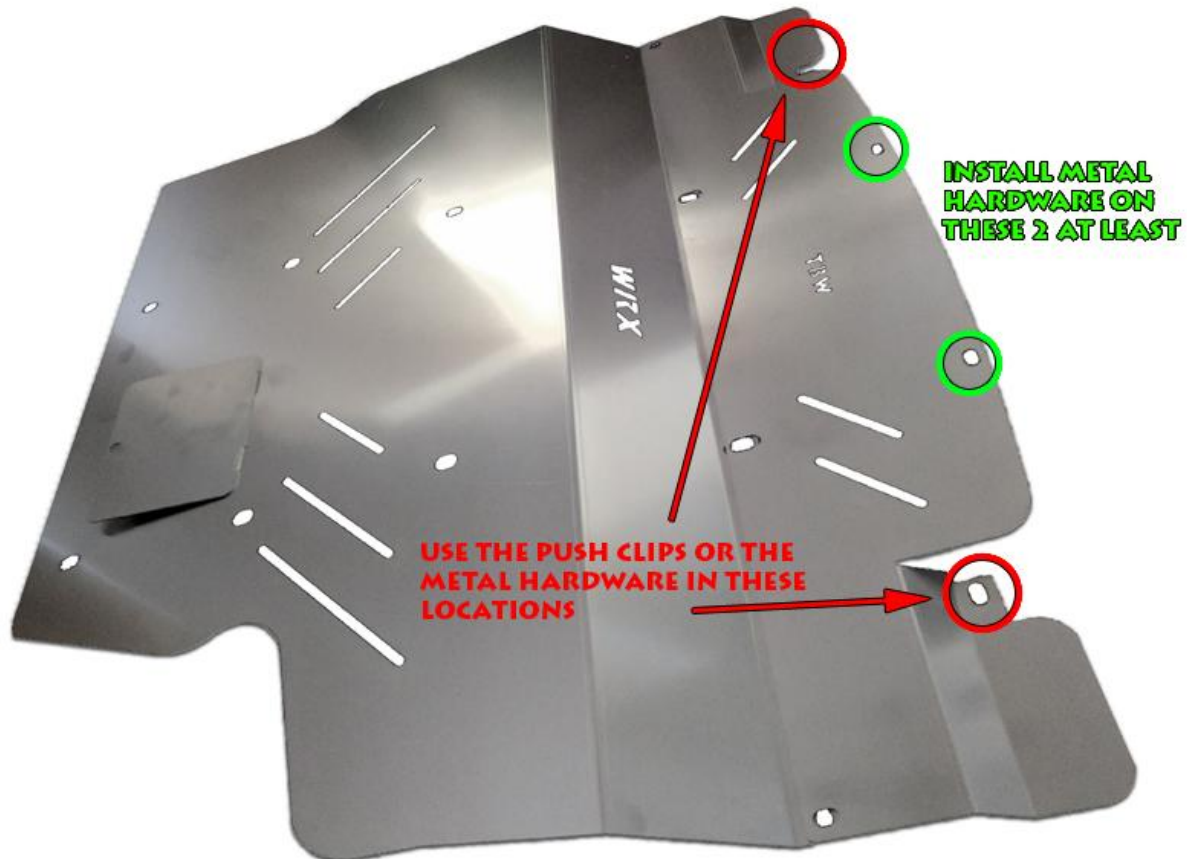

**#5)** After all bolts are in place snug them all down. Do not over-tighten. Make sure that all bolts are installed into location before tightening them down.