

TBW Under Tray Install

2018-2023 Honda ACCORD (10th Gen)


STUDY THESE INSTRUCTIONS BEFORE INSTALLATION.
INSTALLER MUST HAVE KNOWLEDGE OF AUTOMOBILE
SYSTEMS. IF UNFAMILIAR, WE RECOMMEND INSTALL TO BE
COMPLETED BY A QUALIFIED PROFESSIONAL.

- Tools Needed for install:
- Flathead screwdriver
- 10mm socket/wrench
- Rivet Nut Tool



WARNING!

CAUTION SHOULD BE TAKEN WHEN PERFORMING MAINTENANCE OR UPGRADES
TO YOUR VEHICLE. OBSERVE AND ABIDE BY ANY LABELS ON COMPONENTS AND
TOOLS. IF YOU HAVE ANY QUESTIONS CONSULT WITH A PROFESSIONAL
MECHANIC OR CONTACT TBW PERFORMANCE FOR MORE INFORMATION.


#1. Remove the front Panel to access the frame holes for rivet nut install

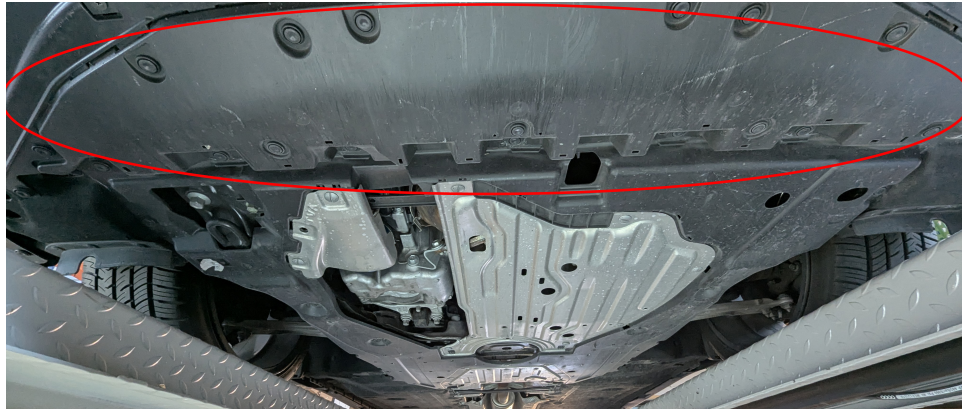


#2 Remove the OEM panel (The 3 RED locations on each side you will reinstall the push clips back into the fender liners after removing the OEM plastic)

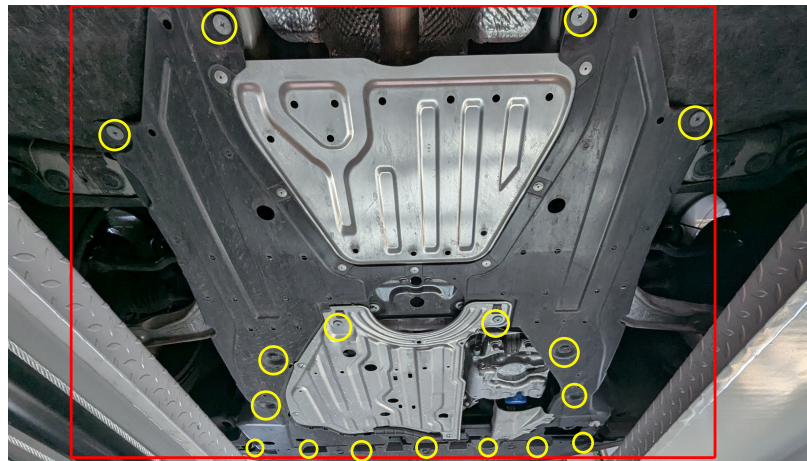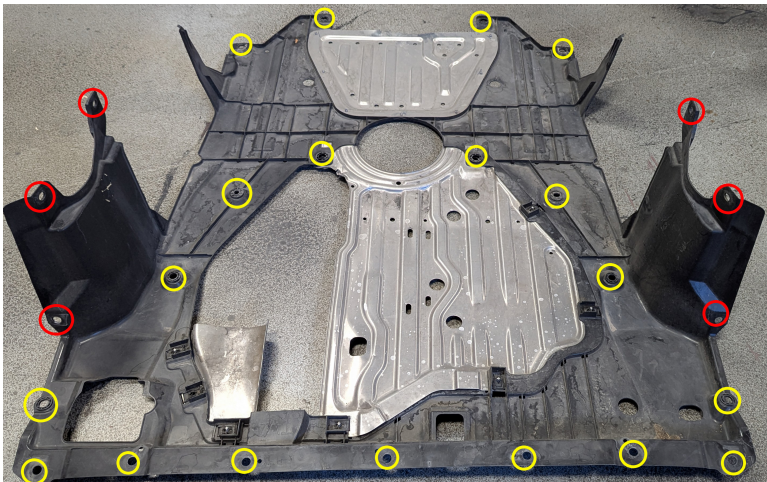


#3 Install M6 5 rivet nuts here (marked in RED) and remove the 2 bolts and weak brace (YELLOW)

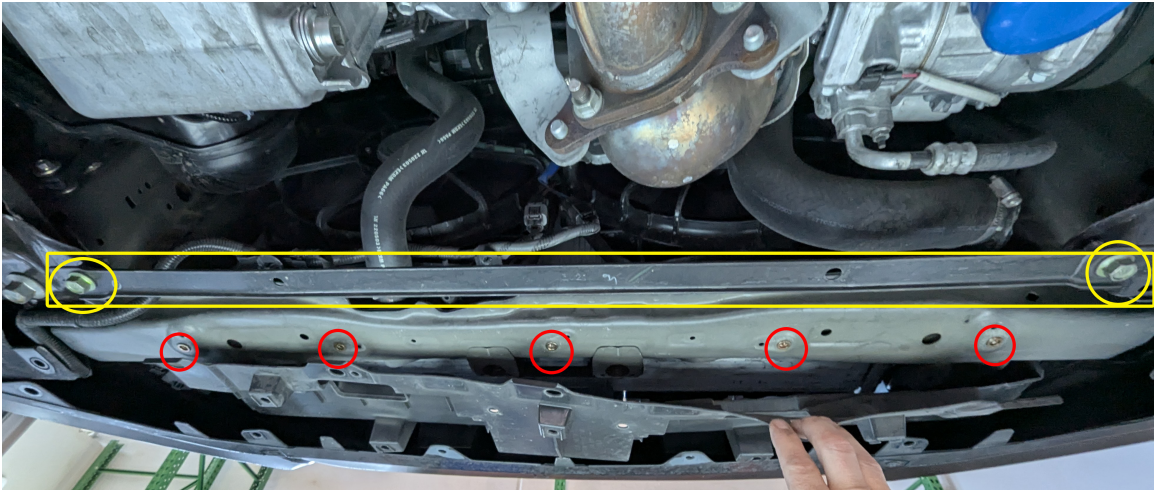

#4 install 2 M6 rivet nuts in the frame as marked (YELLOW)

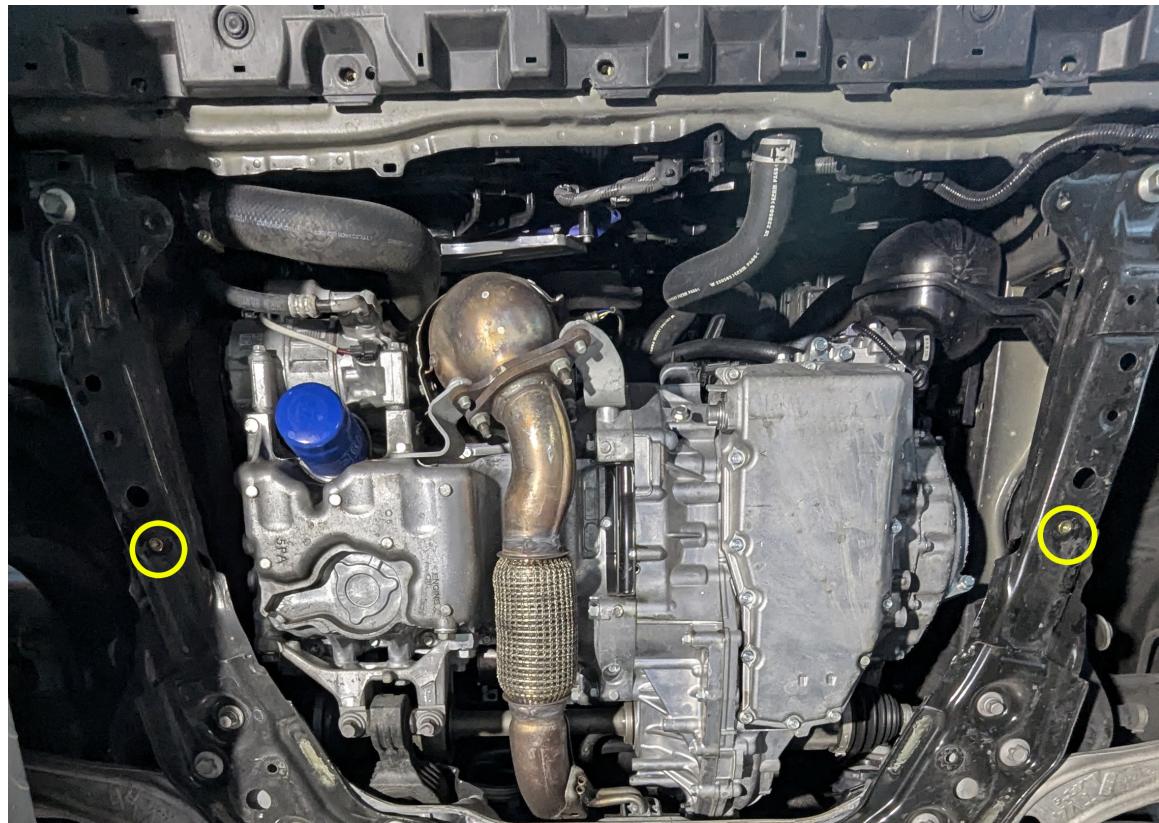

#5 Install rear panel with six M6x20mm bolts

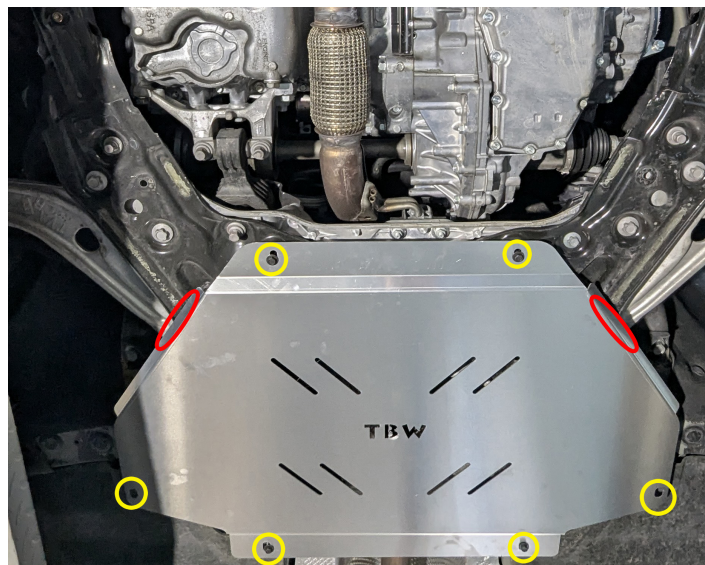

#6 Reinstall the front panel from step #1

Install the Main panel with 5 of the
M6x20mm bolts (RED)

2 of the M6x30mm bolts (longer) with
the plastic spacers (YELLOW)

The 2 bolts at the back of the main
panel will be removed/reinstalled as the
main panel will overlap the rear panel

#7 At this point all bolts will be in place
(oil change doors will come pre-installed)

Tighten all bolts down to approx
15-20 ft lbs

Make sure the front bumper plastic and
the fender liners are secured with the OEM
plastic push clips

