

TBW Under Tray Install

2012-2015 Honda Civic (9th Gen)

STUDY THESE INSTRUCTIONS BEFORE INSTALLATION. INSTALL MUST HAVE A KNOWLEDGE OF AUTOMOBILE SYSTEMS. IF UNFAMILIAR WITH OUTLINED INSTRUCTION WE RECOMMEND INSTALL BE COMPLETED BY A QUALIFIED PROFESSIONAL.

Tools Needed for install:


- Flathead screwdriver
- 10mm, 12mm, 14mm socket / wrench
- Rivet Nut Tool w/ 6mm adapter(not included)

WARNING!


CAUTION SHOULD BE TAKEN WHEN PERFORMING MAINTENANCE OR UPGRADES TO YOUR VEHICLE. OBSERVE AND ABIDE BY ANY LABELS ON COMPONENTS AND TOOLS. IF YOU HAVE ANY QUESTIONS CONSULT WITH A PROFESSIONAL MECHANIC OR CONTACT TBW PERFORMANCE FOR MORE INFORMATION.

#1. Uninstall OEM panel (if existing)


#2. Install Rivet Nuts in all **RED** locations

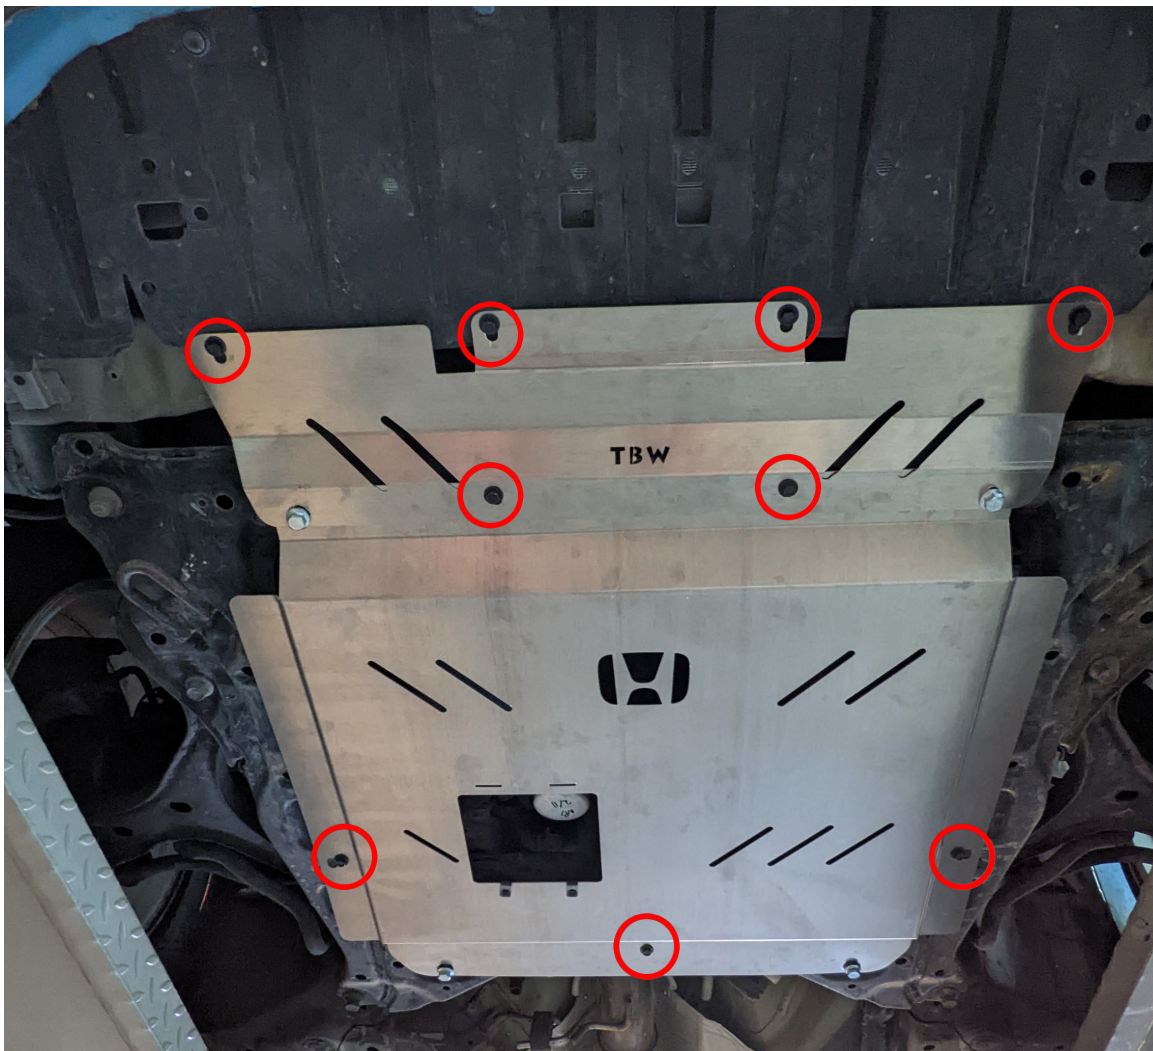

After installing the rivet nuts you should have them in locations like the following pictures:

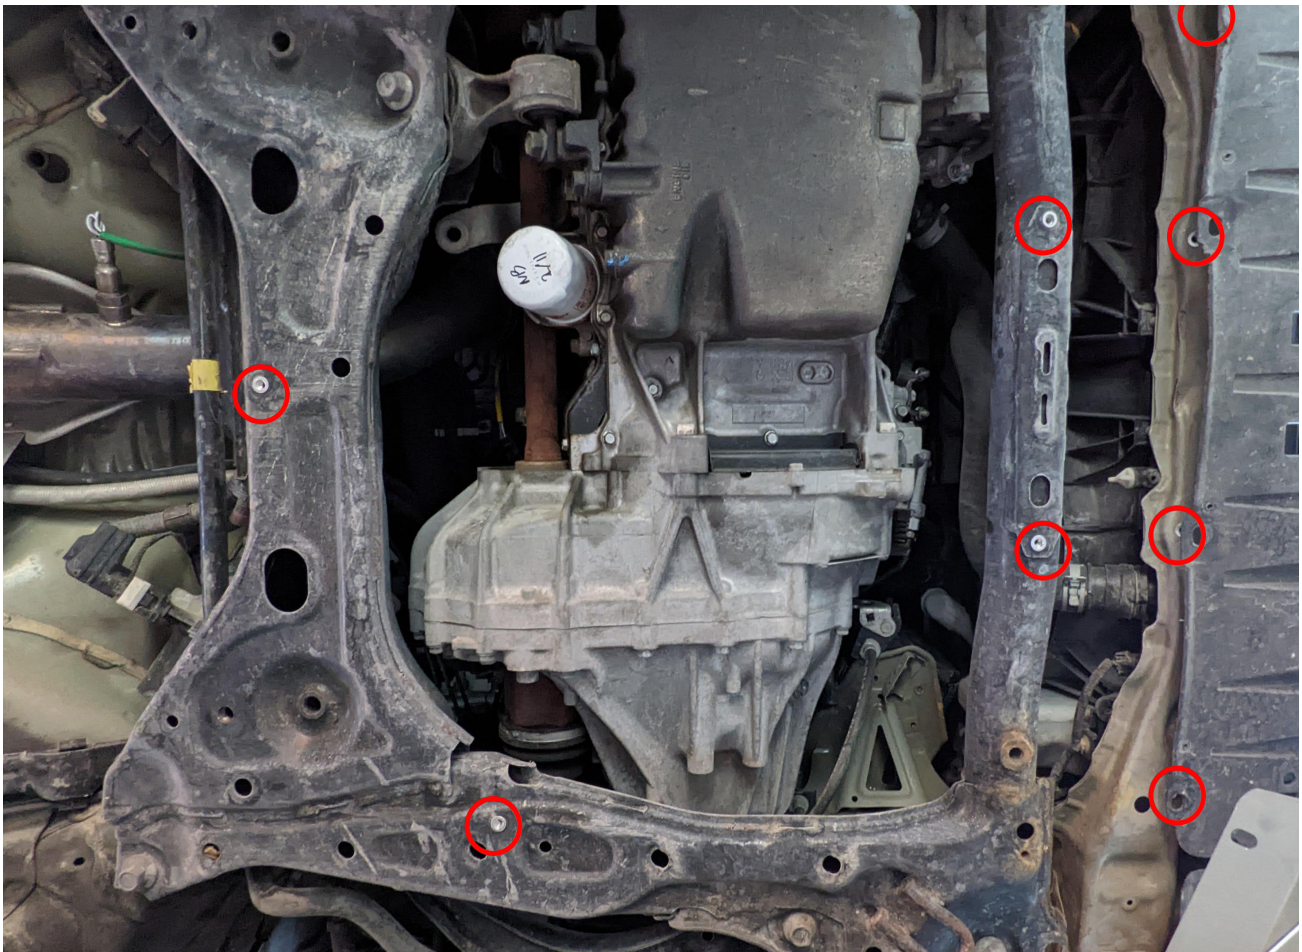

#3. Install the rear panel. RED bolts are 6mm. the Green are the M12
*** DO NOT TIGHTEN BOLTS DOWN YET – only tighten a couple turns ***

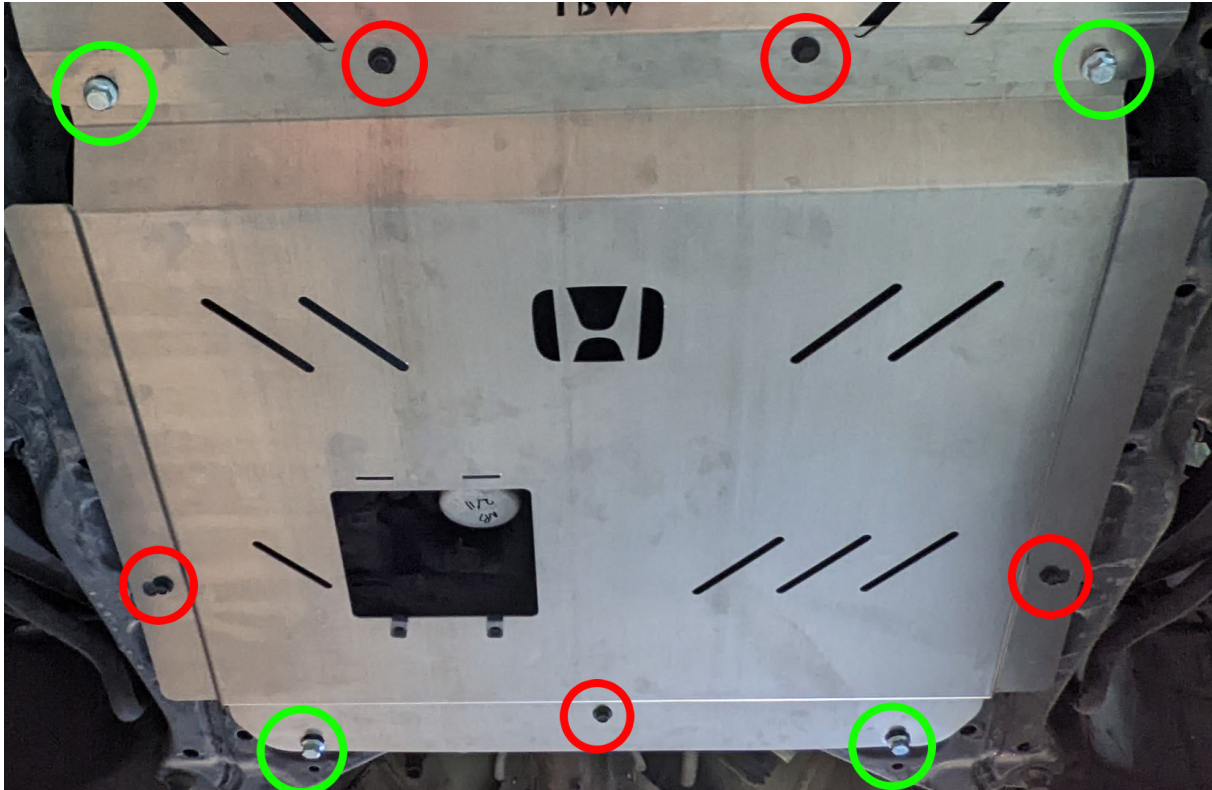

#4. Install the Front panel. Take notice that the front will overlap with the rear and you will use the 2 M6 and 2 M12 bolts to secure both panels together.



#5. After all bolts are in place, tighten down all the bolts and make sure it is secure.