

## Install Instructions 2008-2014 Subaru WRX/STI Shield

1) Use the provided metal M6(6mm) extruded u-nuts (speed nuts) and slide them over the holes in the bumper that are associated with the front panel




2) Mount the side brackets up next - there are existing bolts in the frame with the grounding wires. Unscrew these with a 10mm socket with extension. Feed the ground wire through the hole in the bracket and reattach the bolt through the bracket into the frame. Do NOT tighten the bolt down all the way as you will want it to slide for adjustment.


3) mount the Largest panel using the M8 (largest bolts) starting with the one (1) bolt in the rear. overlap the front piece with the rear and thread the remaining 2 M8 (8mm) bolts in the radiator support. Do not tighten all bolts yet - just turn them 1-2 threads is fine for now.



4) Insert all front 5 M6 (6mm) bolts into the threaded speed nuts installed in step 1.

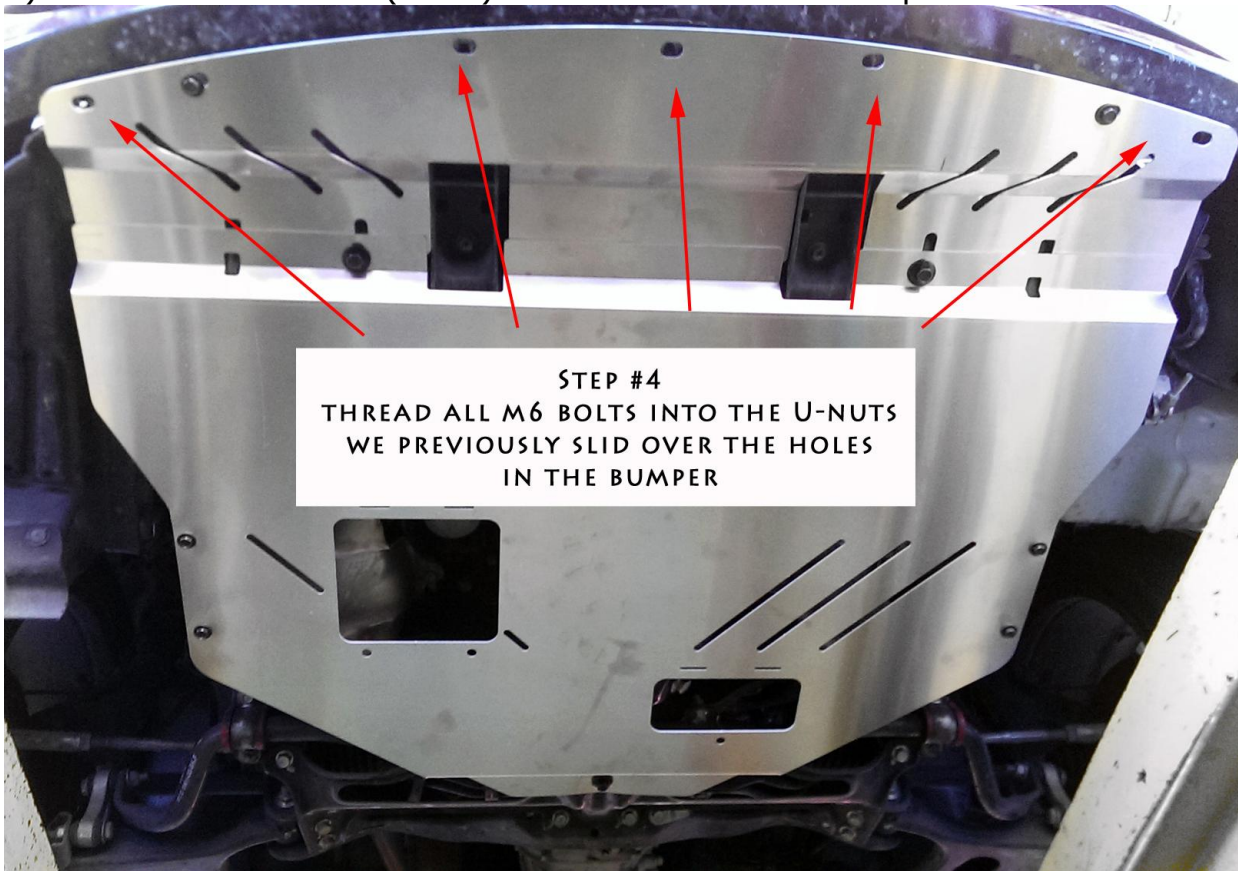

5) Line up the side bracket holes and insert the remaining four(4) M6 bolts

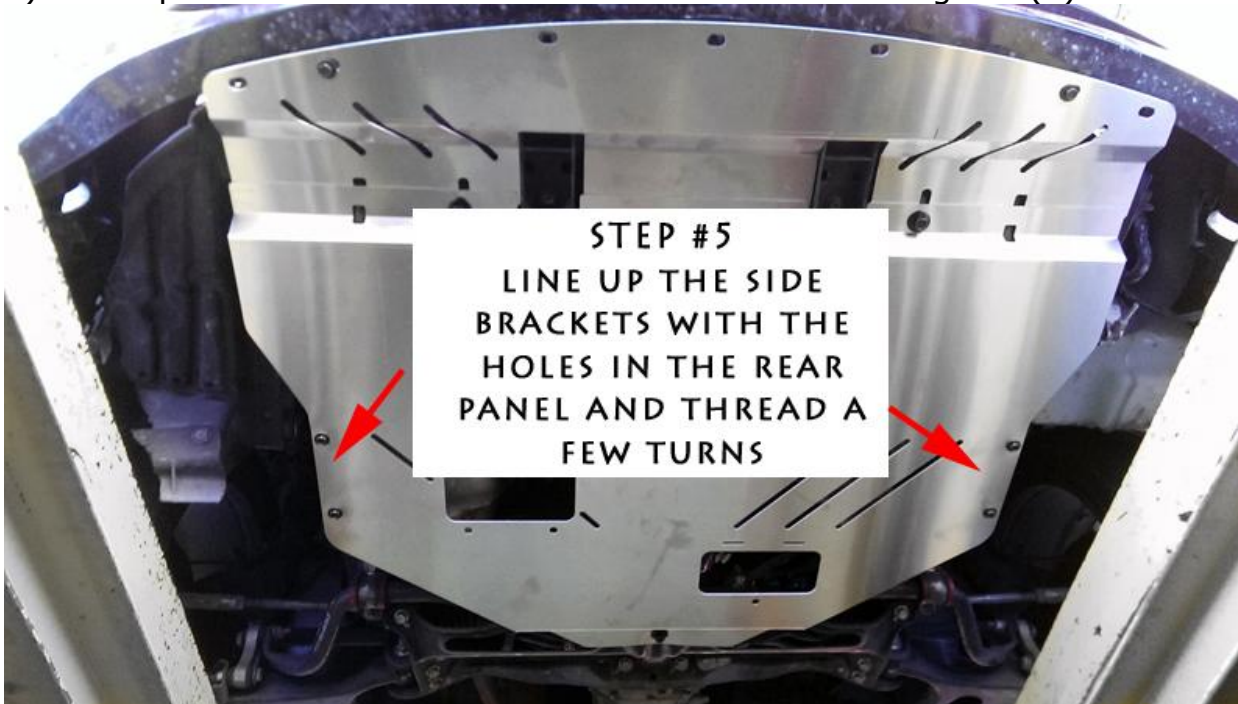

6) At this point all bolts just need to be tightened. Nothing too aggressive is needed - just snug. Make sure not to forget the bolts that hold the side brackets to the frame.